RADON TEST INSTRUCTIONS: QUICK START GUIDE


(see more detailed instructions on reverse)

SMOKER'S HELPLINE

- A B C D A B C
- 1. PICK a room and a location in your home and PLACE your detector.
- OPEN the foil test kit package and RECORD THE DATE on the test kit envelope. ONCE THE PACKAGE IS OPEN,
 THE DETECTOR IS ACTIVE. Keep the envelope ON YOUR FRIDGE (or in a convenient location) until you have
 received your test results from the lab.
 - (Dispose of the used foil package and keep the new foil package in the envelope to return the detector after testing is complete)
- 3. Log on to: www.takeactiononradon.ca/radon-testing-program and complete the START SURVEY.
- 4. Leave the detector in place for the next : 91 days to complete measurement.
- 5. Complete the online **END** survey and **RECORD** the date on the test kit envelope.
- 6. Place the detector in the stamped, addressed envelope and return it to the lab. Keep the envelope for your



1. **OPEN** the foil package and remove detector.



2. **PICK** a room and **PLACE** the detector beside a bed or couch in the lowest "lived-in" level of your home.



Log on to:
www.takeactiononradon.ca/
radon-testing-program
and complete the START SURVEY.



4. Leave in place **91** days.



 Log on to: www.takeactiononradon.ca/ radon-testing-program and complete the END SURVEY.



Place the detector in the stamped, addressed envelope and return it to the lab.



Questions?

Contact Take Action on Radon: info@takeactiononradon.ca or 1-855-722-6777

DETAILED RADON TEST INSTRUCTIONS


- AND REFERENCE SHEET

SETTING UP AND ACTIVATING YOUR DETECTOR

- PICK a room: The radon detector should be placed in a room such as a basement bedroom, office or playroom. If the basement is not used 4 hours a day or more, then choose a room on the main floor where you spend an average of at least 4 hours per day. Radon levels are generally highest in lower levels of your home.
- OPEN the test kit package: your detector is now active and ready to use. Please complete the information on the brown envelope and store the envelope on your fridge or in another convenient location until you receive your radon test results from the lab at the end of the program.
- PLACE your detector on a table or shelf beside a bed or couch. Keep it away from windows, fans and vents, and off of the floor (see image for details)
- 4. COMPLETE the online START SURVEY. Enter your contact information and start date and complete the launch survey at: www.takeactiononradon.ca/radon-testing-program

Detector Placement: Minimum

Distance From Room Features

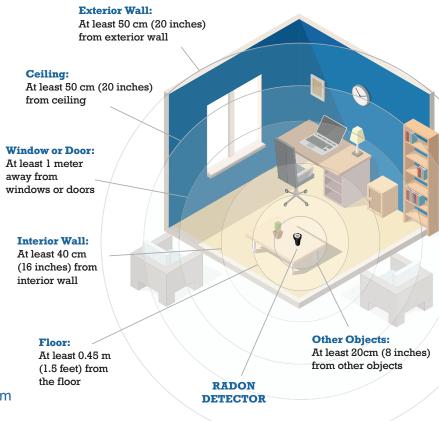

Good locations include: Basement bedrooms, family rooms or offices; ground-level family rooms, living rooms, dens, playrooms and bedrooms. A bedroom is preferred because people generally spend more time in their bedrooms than in any other room in the house.

DO NOT place the detector in crawl spaces, kitchens, bathrooms, laundry areas, furnace rooms, or closets.

After at least 91 days after starting the test it is time to return the detector to the lab.

- 5. COMPLETE the END SURVEY online. Log in to www.takeactiononradon.ca/radon-testing-program
- 6. Place the detector in the stamped, addressed envelope and return it to the lab at:
 Radonova, 900 Oakmont Lane Suite 207 Westmont, IL 60559 USA

