

# **Radon Test Instructions: Quick Start Guide**


(see more detailed instructions on reverse)

Thanks for joining the 100 Test Kit Challenge!


- 1. Open the test kit package and RECORD THE DATE on the test kit envelope. ONCE THE PACKAGE IS OPEN, THE DETECTOR IS ACTIVE. Keep the envelope ON YOUR FRIDGE until you have received your test results from the lab.
- 2. PICK a room and a location in your home and PLACE your detector.
- 3. Log on to <u>www.radontestkitchallenge.ca</u> and complete the START SURVEY.
- 4. Leave the detector in place for the next 100 days to complete measurement.

### On the date you are ready to drop the detector off at the Community Collection location:

- 5. Complete the online END survey and RECORD the date on the test kit envelope.
- 6. RETURN the detector to the Community Collection Point location listed on your envelope.

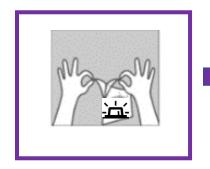


1. OPEN the plastic package and remove detector.

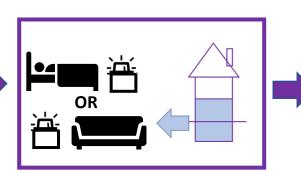

2. PICK a room and PLACE the detector beside a bed or couch in the lowest "lived-in" level of your home.




**3.** Go to radontestkitchallenge.ca and complete the START SURVEY.

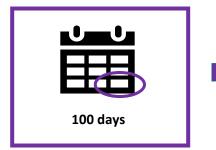

4. Leave in place 100 days.



5. Log on and complete the END SURVEY.

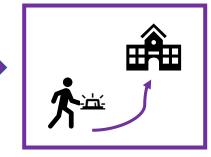

**6.** RETURN detector to your Community Collection Point listed on your envelope.




# **Detailed Radon Test Instructions and Reference Sheet**

#### Setting up and activating your detector

- OPEN the test kit package: your detector is now active and ready to use. Please complete the information on the brown envelope and store the envelope on your fridge or in another convenient location until you receive your radon test results from the lab at the end of the program.
- 2. PICK a room: The radon detector should be placed in a room such as a basement bedroom, office or playroom. If the basement is not used 4 hours a day or more, then choose a room on the main floor where you spend an average of at least 4 hours per day. Radon levels are generally highest in lower levels of your home.

PLACE the detector in a proper location in that room. Place your detector on a table or shelf beside a bed or couch. Ensure it is away from windows, fans and air openings, and off of the floor.

**Good locations include:** Basement bedrooms, family rooms or offices; ground-level family rooms, living rooms, dens, playrooms and bedrooms. A

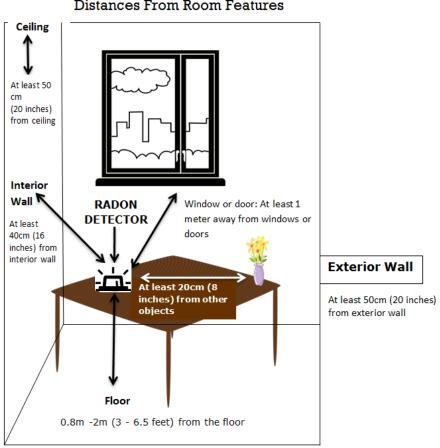

#### Detector Placement: Minimum Distances From Room Features

bedroom is preferred because people generally spend more time in their bedrooms than in any other room in the house.

**DO NOT** place the detector in crawl spaces, kitchens, bathrooms, laundry areas, furnace rooms, or closets.

**3.** COMPLETE the online START SURVEY. Enter your contact information and start date and complete the launch survey at: <u>www.radontestkitchallenge.ca</u>

Enjoy the next 100 days. If you have provided us with your email address in the Start Survey, we will send you a reminder email about the upcoming collection period. Please contact us if you haven't received an email from us.

- **4.** At the end of the testing period (after 100 days):
- 5. COMPLETE the END SURVEY online. Log in to <u>www.radontestkitchallenge.ca</u> to register the end date of the measurement period and complete the last few questions of our survey.
- 6. RETURN the detector by dropping it off to your Community Collection Point at the address on your envelope.

If your detector is NOT returned during the drop off period, you will be responsible for the cost of mailing it to the lab for analysis. Mail to: Radonova, 900 Oakmont Lane, Suite 207 Westmont, IL 60559

We will provide customs information required for the Canada Post mailer if you return by mail.